


Konfiguracja routera TP-Link Archer C2

1

Zaloguj się do strony konfiguracyjnej routera.
Na komputerze albo laptopie podłączonym do routera należy otworzyć przeglądarkę internetową i na górze w pasku adresowym wpisać stronę "192.186.0.1".


2

Domyślne dane do logowania to "admin" jako login i "admin" jako hasło.
Ewentualnie router może poprosić o nadanie nowych danych do logowania (przy pierwszym uruchomieniu).

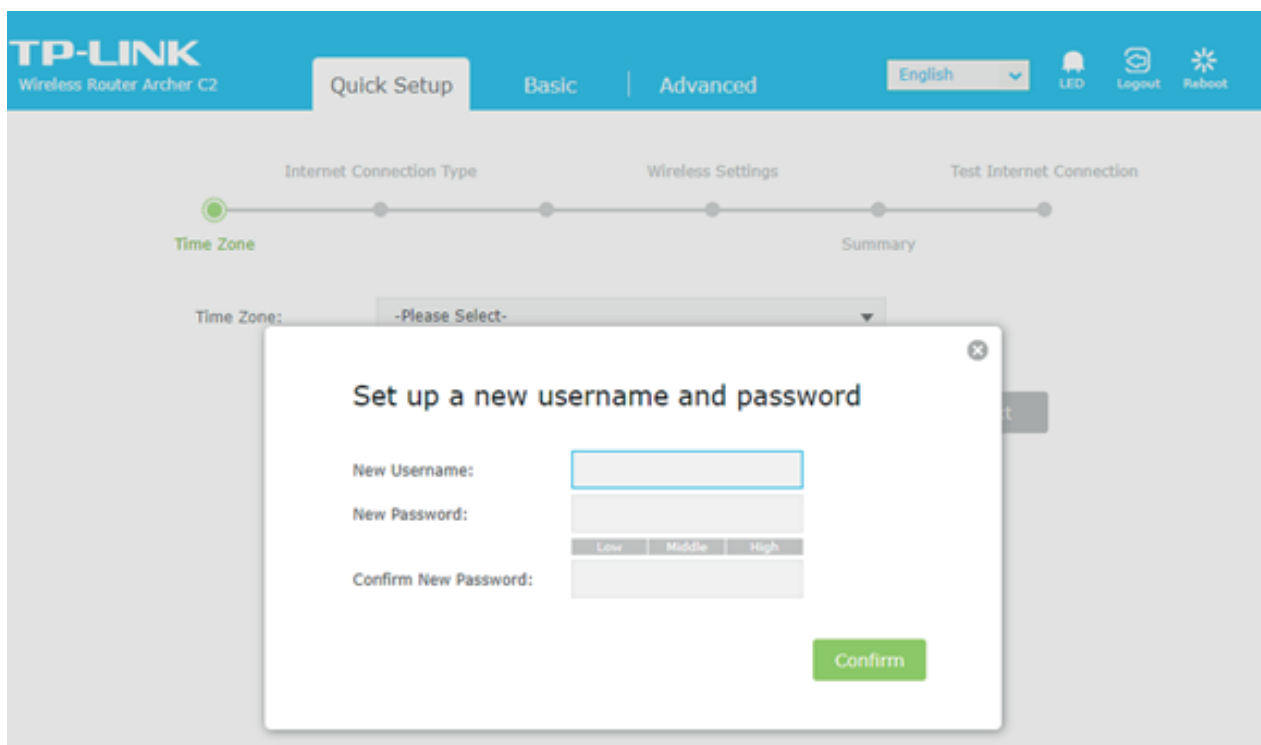


3

Po zalogowaniu się do routera wybieramy zakładkę "Quick Setup" i w pierwszym kroku wybieramy strefę czasową po czym klikamy "Next"

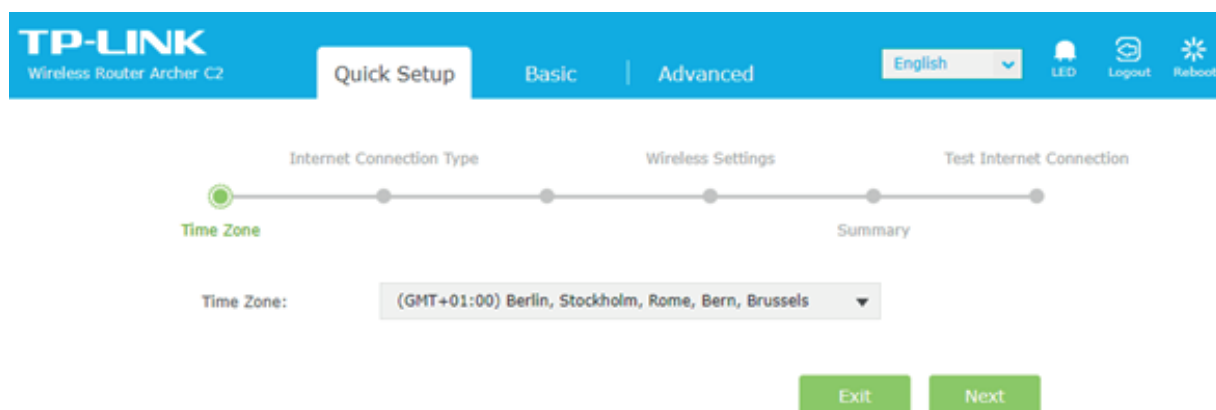

4

W następnym kroku wybieramy "Dynamic IP" i klikamy "Next":

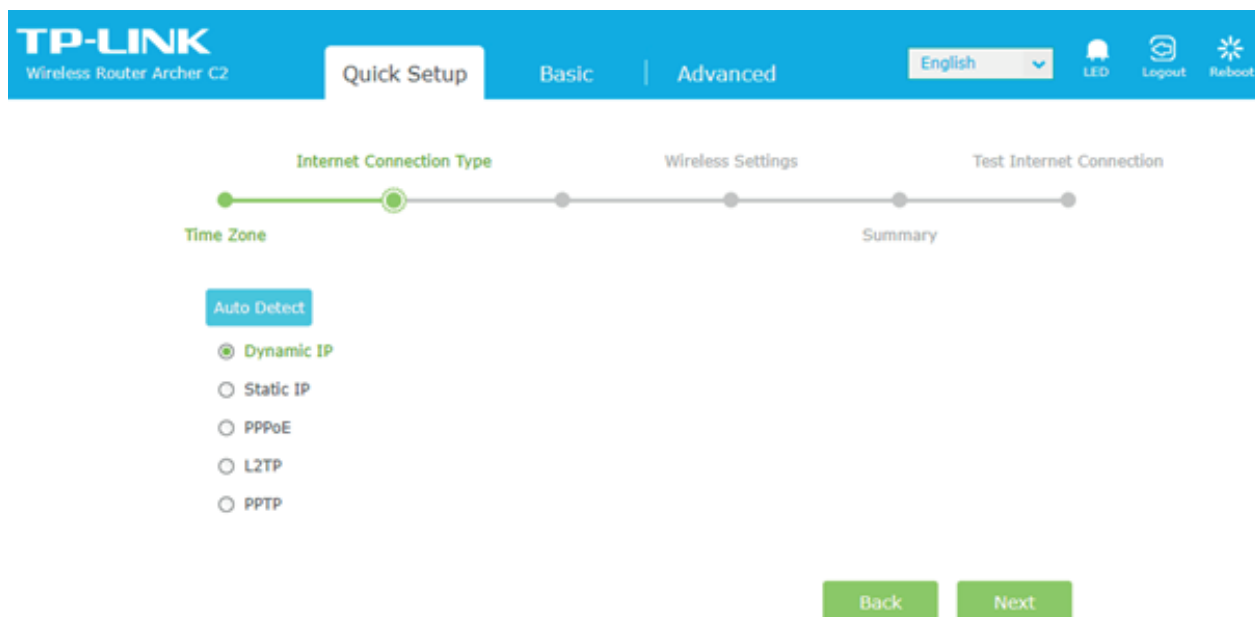

5

Przechodząc dalej wybieramy opcję "Do NOT Clone MAC Address" i klikamy "Next":

The screenshot shows the TP-LINK Archer C2 Quick Setup interface. The top navigation bar includes 'Quick Setup', 'Basic', and 'Advanced' tabs, along with a language dropdown set to 'English' and icons for 'LED', 'Logout', and 'Reboot'. A progress bar at the top indicates the current step is 'Internet Connection Type', with other steps being 'Time Zone', 'Wireless Settings', 'Test Internet Connection', and 'Summary'. The main content area contains the following text: 'If your ISP only allows Internet access to a specific MAC address, you need to clone the MAC address of the primary computer. If you are not sure, select Do NOT clone MAC Address.' Below this, there are two radio button options: 'Do NOT Clone MAC Address' (which is selected) and 'Clone Current Computer MAC Address'. A note states: 'Note: If you select Clone MAC Address, you need to clone the original computer's MAC address that is registered with your ISP.' At the bottom right, there are 'Back' and 'Next' buttons.

6

W następnym kroku "Wireless Settings" możemy ustawić nazwę oraz hasła do sieci WiFi lub zostawić je domyślnie. Ważne, aby nazwa sieci 2.4GHz i 5GHz różniły się od siebie. Po ustawieniu klikamy "Next":

The screenshot shows the TP-LINK Archer C2 Quick Setup interface at the 'Wireless Settings' step. The top navigation bar is the same as in the previous step. The progress bar now highlights 'Wireless Settings'. The main content area is divided into two sections: '2.4GHz Wireless' and '5GHz Wireless'. Each section has a checked 'Enable Wireless Radio' checkbox. For the 2.4GHz network, the 'Network Name (SSID)' is 'TP-LINK_0141' and the 'Password' is '35873570'. There is a 'Hide SSID' checkbox which is unchecked. The 5GHz network has a 'Network Name (SSID)' of 'TP-LINK_0141_5G' and the same password '35873570', with 'Hide SSID' also unchecked. 'Back' and 'Next' buttons are located at the bottom right.

7

W oknie "Summary" jeżeli wszystko wyświetla się poprawnie klikamy "Save":

TP-LINK
Wireless Router Archer C2

Quick Setup | Basic | Advanced

English | LED | Logout | Reboot

Internet Connection Type | Wireless Settings | Test Internet Connection

Time Zone | Summary

Time Zone: (GMT+01:00) Berlin, Stockholm, Rome, Bern, Brussels

Internet Connection Type: Dynamic IP

2.4GHz Wireless: On

Network Name (SSID): TP-LINK_0141

Password: 35873570

5GHz Wireless: On

Network Name (SSID): TP-LINK_0141_5G

Password: 35873570

Back Save

8

Po zapisaniu, router jest skonfigurowany i gotowy do działania (może wylogować ze strony konfiguracyjnej). Jeżeli urządzenie jest pierwszy raz używane, to należy je jeszcze uwierzytelnić w sieci, aby miało dostęp do internetu.